

FISHER & PAYKEL

FABRIC CARE SOLUTION

DRYER INSTALLATION

DH8060J5, DH9060J5, DH8060P5, DH8060PG5, DH1060P5,
DH1060PG5, DH1060R5, DH1060RG5, DH1060T5, DH1060TG5,
DH1060MZB5, DH1060H5, DH1060HG5, DH1060HL5,
DH1060YZB5, DH1060YLZB5, DH1060D, DH1060HLG5,
DH9060D5, DH1060DG5, DH9060DG5 models.

INSTALLATION GUIDE

NZ AU

COMPONENTS REQUIRED

TOOLS

Not supplied

- ☐ Box cutter
- ☐ Phillips #2 screwdriver
- ☐ Level
- ☐ T25 Torx screwdriver

PARTS

Supplied and required


- ☐ 1x Cold water hose
- ☐ 1x Hot water hose
- ☐ 1x Shoe rack
- ☐ 3x Spare part condenser foam filters
- ☐ 2x Dryer rear brackets

*Not required for single product installation.

ACCESSING YOUR PRODUCT SPECIFICATIONS



For full product, cabinetry and service specifications, refer to the Planning Guide. To access the Planning Guide, scan the QR code or visit fisherpaykel.com/specify. Search by appliance type, product name or model code.

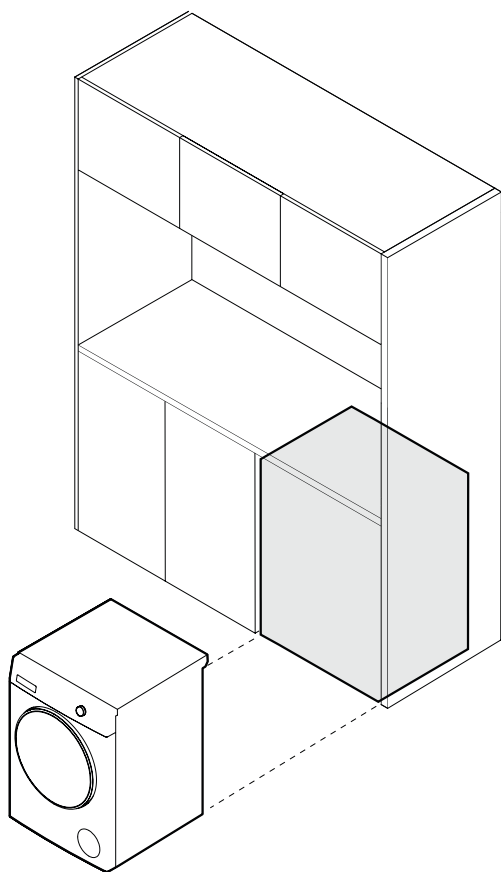


PRIOR TO INSTALLATION



fisherpaykel.com/specify

1. Ensure cabinetry and servicing specifications have been met and clearances have been considered.

Refer to the Planning Guide for details.

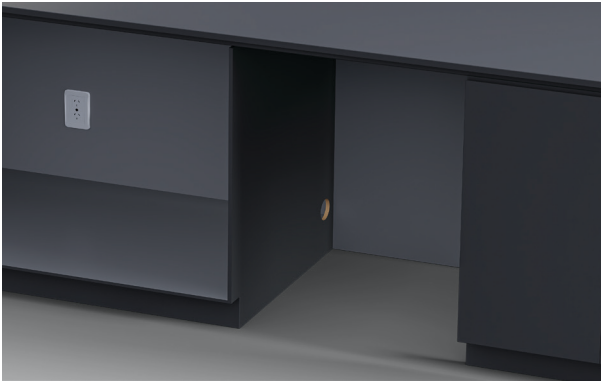

2. Ensure floor is level and clear and a finished return has been created.



3. Ensure power will remain accessible following install to allow access for any future product maintenance.

Service holes should be smooth with grommets installed where required.

Refer to the services section of the Planning Guide for more details.

UNPACK



1. Cut the straps and the line printed on the top of the carton. Lift to remove. Discard braces and corner posts. Remove any packaging and accessories from the drum and base packer.



2. Dispose of packaging responsibly.




3. Protect flooring before positioning dryer as close to the installation location as possible, ensuring enough working room is left available.

REVERSE DOOR (OPTIONAL)

Some dryer models have reversible hinge and latch fittings to allow the door to open on either the left or right side as needed. Refer to table below for applicable and non applicable models.

REVERSIBLE	NON-REVERSIBLE
DH8060J5, DH9060J5, DH8060P5, DH8060PG5, DH1060P5, DH1060PG5, DH9060D5, DH9060DG5, DH1060D5, DH1060DG5, DH1060R5, DH1060RG5, DH1060T5, DH1060TG5, DH1060HL5, DH1060HLG5, DH1060H5, DH1060HG5.	DH1060YZB5, DH1060YLZB5, DH1060MZB5.

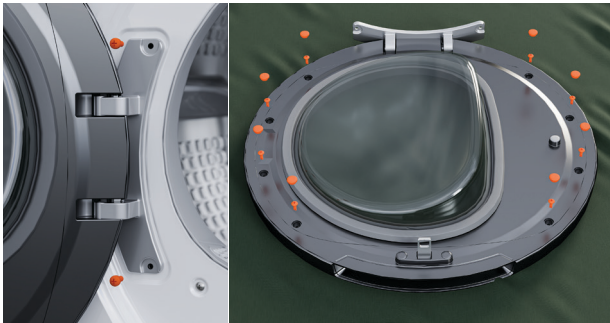

1. Unscrew hinge screw using a T25 torx screwdriver then remove door and place face down on a protected surface.

Remove plugs (x8) from inner door flanges, then remove screws.



2. Insert flat-head screwdriver in access slot to pry off inner door. Rotate door 180 degrees and fit back in place.

Reattach screws, alternating between sides of the door. Replace plugs.



3. On dryer, unscrew and remove latch cover to access latch.

REVERSE DOOR (OPTIONAL)



4. Unscrew latch, and slide to remove.




5. Rotate latch and insert on opposite side of dryer. Secure with screw.

Refit and secure latch cover with latch cover screws.



6. Refit door hinge and secure with hinge screws.

LEVEL

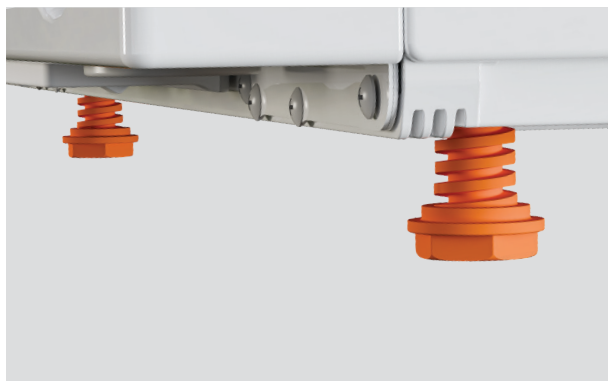

1. Adjust the feet until the dryer is level front to back and corner to corner.



2. Once level, move the dryer into its final position, allowing for required clearances.

Recheck dryer is level before removing from alcove.

CONNECT CABLES AND HOSES



[Fisherpaykel.com/specify](https://fisherpaykel.com/specify)

1. Refer to the Planning Guide for full service information.



2. Optional:

For dryers with displays, fit the drain hose extension if the dryer is to be plumbed.



3. Connect the angled end of the dryer cold hose to the dryer.

CONNECT CABLES AND HOSES




4. Route the power cables and hoses through service holes.

Ensure power will remain accessible following install to allow access for any future product maintenance.



5. Connect the cold hose to cold water tap and turn tap on.

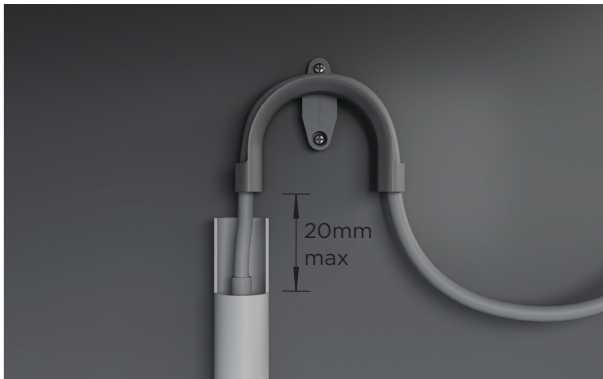

6. Standpipe Installations

Route the drain hose through the guide and place into the standpipe.

Ensure a maximum of 20mm of the hose rests in the standpipe.

CONNECT CABLES AND HOSES



7. Spigot Installations

Drill out blanking insert from the spigot.

Route the drain hose through the guide and place into the spigot. Secure using a hose clamp.



8. Connect the power cable and check product is powered on.

INSTALL DRYER



1. Push dryer into the alcove.
Take care not to damage hoses or power cord.



2. Check alignment and ensure required clearances are maintained. Adjust as required.

INSTALLER CHECKLIST

TO BE COMPLETED BY THE INSTALLER.

- ☐ Has the packaging been removed?
- ☐ Is the dryer correctly levelled, feet are extended and cabinet corners are clear off the floor?
- ☐ Is the drain hose threaded through the hose guide 'U bend' (with no more than 20mm extended) and hooked into your standpipe or tub, or attached to a spigot?
- ☐ Is the cold hose connected to the cold valve marked 'C'?
- ☐ Have the taps been turned on?
- ☐ Has the power cord been connected to an appropriate power supply and the power turned on?
- ☐ Have you preformed a test cycle?

FISHERPAYKEL.COM

© Fisher & Paykel Appliances 2025. All rights reserved.

The models shown in this guide may not be available in all markets
and are subject to change at any time.

The product specifications in this guide apply to the specific products and
models described at the date of issue. Under our policy of continuous product
improvement, these specifications may change at any time.

For current details about model and specification availability in your country,
please go to our website or contact your local Fisher & Paykel dealer.

432975A 10.25