
DISHDRAWER™ DISHWASHER

FIRST USE

Get to know your appliance	3
Load dishware	5
Use rinse aid	6
Load detergent	7
Select a suitable cycle	8
Select a suitable modifier	9
Standards testing	9
Set a cycle	10
Set up Wi-Fi and remote mode	11
Adjust the settings	12
Settings	13
Maintain wash performance	15

FISHER & PAYKEL

NZ AU UK IE SG

CONTEMPORARY DISHDRAWER™ DISHWASHER


DD60SCTX9, DD60SCX9, DD60DCX9, DD60SCTX9 & DD60SCX9

GET TO KNOW YOUR APPLIANCE

How to get the best results from your dishwasher



- Check that your dishware is dishwasher safe
- Keep the spray arm clear of obstructions
- Load items so water from the spray arm can reach them
- Use correct detergent quantity
- Use liquid rinse aid
- Clean the filter
- Run regular deep clean cycles
- Descale to remove mineral buildup
- Register your product to get streamlined service support.

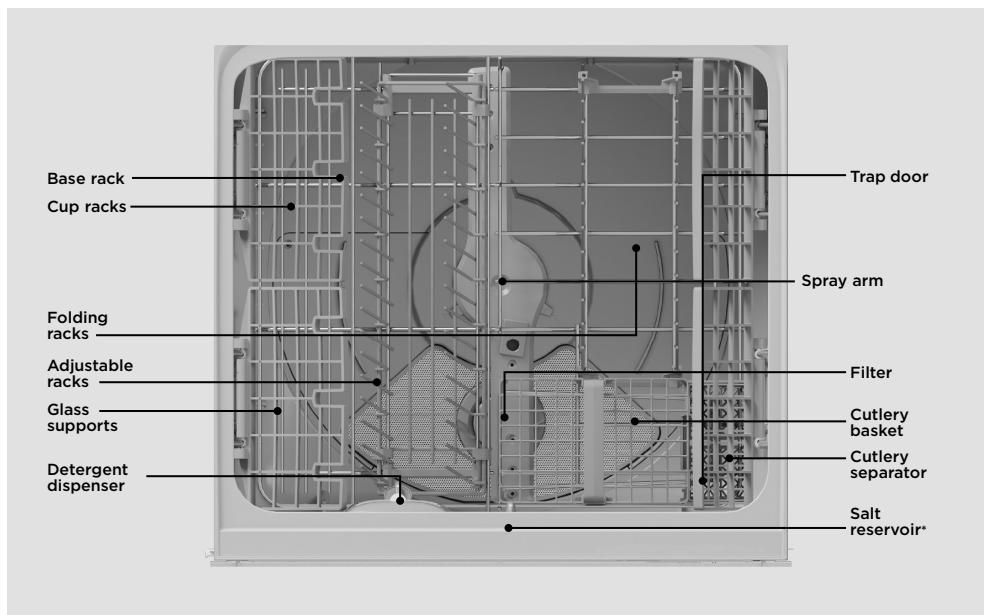

*some models only

GET TO KNOW YOUR APPLIANCE



Control panel features

① On/Off + Drawer selector*	⑧ Lock indicator
② Wash program selector	⑨ Wash program indicators
③ Wash modifier selector	⑩ Wash stage indicators
④ Start + Delay start	⑪ Display
⑤ Delayed start indicator	⑫ Drawer indicator*
⑥ Salt indicator**	⑬ Wash modifier indicators
⑦ Wi-Fi indicator	

*double models only | **water softener models only

LOAD DISHWARE

Tips for energy efficiency




- Load the dishwasher to capacity.
- Remove large food scraps, but do not pre-rinse dishes as this uses more water and energy.
- Select the most appropriate program for each load. See 'Select a suitable cycle' for recommendations.



Load items effectively

Space items evenly in the drawer, with cups and containers facing down, so water from the spray arm can reach them and drain away.

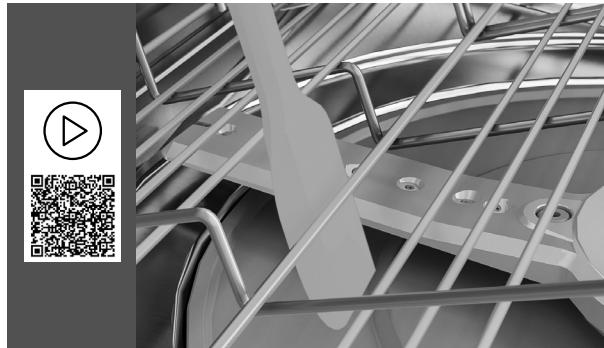

Check for obstructions

Check there are no items that will prevent the spray arm from rotating.



Load cutlery correctly

Load sharp knives with handles up. Mix spoons, knives and forks in each section to prevent nesting.

USE RINSE AID



Rinse aid improves dry performance and prevents tarnishing on metal and streaks on glass and dishware. Fill the rinse aid dispenser before adding detergent.



1. Turn the plug anticlockwise and remove.



2. Pour rinse aid into the opening. If spilled, wipe immediately.



3. Refit the plug, turning clockwise until secure with the hand grip in a vertical position.

LOAD DETERGENT



We recommend:

- Premium powdered detergents and tablets to effectively clean dishes, utensils and filters in your dishwasher.



We do not recommend:


- Non-premium powdered detergents and tablets, as these can result in faster grease buildup and reduced wash performance.
- Detergent sheets, as these produce excessive foam.
- Handwashing dish detergents and laundry or other detergents.



If using powdered detergent

Press the latch to open the dispenser.

Add the recommended quantity of detergent, and close the dispenser. See Care and Maintenance guide for details.

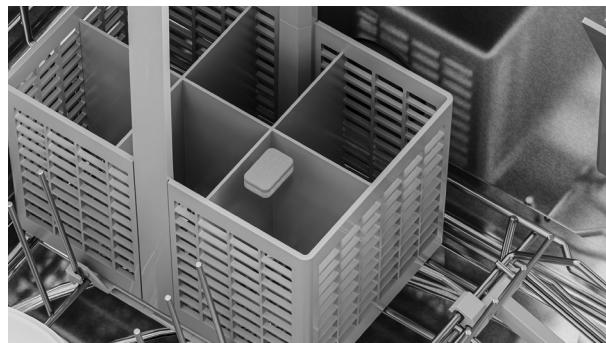

If using tablets

Place a tablet directly into the cutlery basket, tablet tray, or the tub.

Ensure tablet is not touching cutlery, dishes, or drawer base.

SELECT A SUITABLE CYCLE



Each cycle is designed for a specific purpose and has different time, energy and water requirements. Choose a cycle that balances load type and efficiency to get the best results.

⌚ TIME | ⚡ ENERGY | ⚫ WATER

WASH PROGRAMS

ECO DEFAULT

For normally soiled dishes for optimum water and energy use.

Typical items: plates, bowls, cutlery from regular meals



RINSE

Prevents odours and soils from drying on dishes.

Typical items: any items waiting for a full wash



HEAVY DRY+, QUICK, SANITISE

Designed for heavily soiled pots, pans and dishes.

 
Typical items: pots, pans, casserole dishes with baked-on food



MEDIUM DRY+, QUICK, SANITISE

For dishes that are quite heavily soiled or to remove food that has been left overnight.


Typical items: plates with dried food, serving dishes



LIGHT DRY+

For very lightly soiled dishes with easy-to-remove soils. No drying.

 
Typical items: plates, bowls, cups, plastic items and glassware with minimal residue



60MIN DRY+

For dishes that are quite heavily soiled or food that has been left to dry overnight. No drying.

 
Typical items: plates with dried food, serving dishes



GLASSWARE DRY+

For lightly soiled and heat sensitive crockery and glassware such as wine glasses.

 Typical items: fine china, glassware, heat-sensitive crockery



SELECT A SUITABLE MODIFIER

..... WASH MODIFIERS

DRY+

DRY+ increases the final rinse temperature and the length of the drying phase.

QUICK

QUICK uses additional water and energy for a faster wash time.

SANITIZE

SANITISE increases rinse temperature to 70°C. This meets the sanitisation conditions required by Section 6, NSF 184.

A successful cycle will end as normal. If the sanitise cycle is interrupted, an alert will sound and the sanitize indicator will flash. Press **START ►||** twice to clear alert. Repeat the cycle.

..... DRAWER DRY

Wash program standards tests are based on the ECO wash program. Standards testing information and wash data can be viewed online by going to <https://www.fisherpaykel.com> and searching your model code.

New Zealand / Australia / Singapore: 7 place settings per drawer.

United Kingdom / Ireland: 6 place settings per drawer.


..... STANDARDS TESTING

Wash program standards tests are based on the ECO wash program. Standards testing information and wash data can be viewed online by going to <https://www.fisherpaykel.com> and searching your model code.

New Zealand / Australia / Singapore: 7 place settings per drawer.

United Kingdom / Ireland: 6 place settings per drawer.


SET A CYCLE

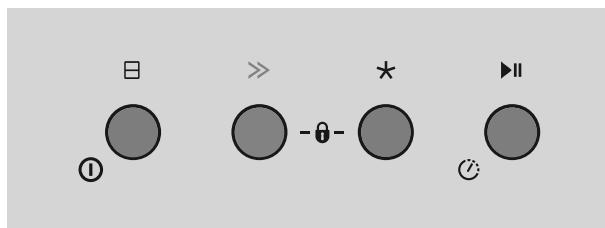

Setting a wash program

1. Press **WASH PROGRAM SELECTOR gg** to scroll and select a wash program.


Press **START ▶II** then close the drawer.

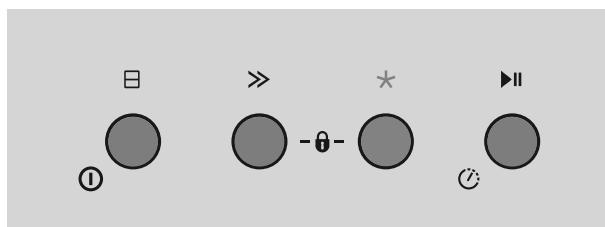

Setting a wash modifier


Press **MODIFIER SELECTOR *** to select a wash modifier.

Press **START ▶II** to start the wash, then close the drawer.

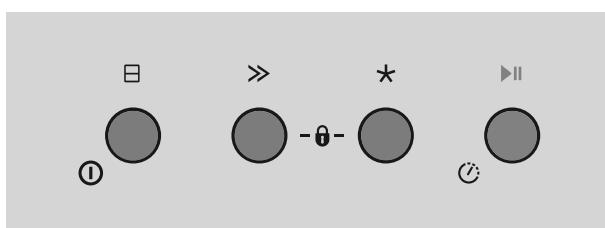


Pausing a wash

Press **START ▶II** to pause the wash. Wait for three short and one long tone before opening the drawer.

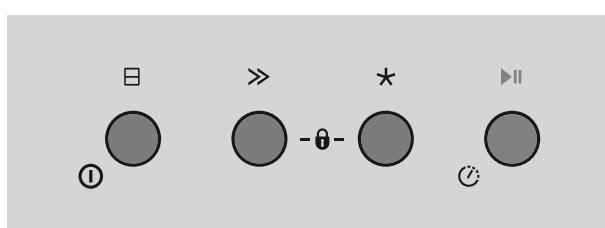

Resuming a wash

Press **START ▶II** to resume the wash, then close the drawer.

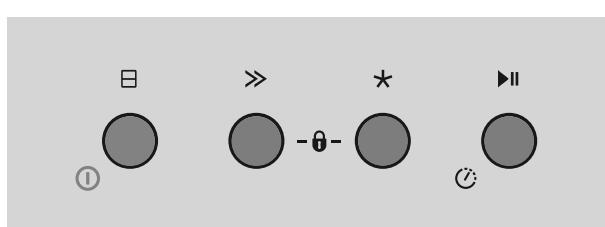

Cancelling a wash

Press and hold **On/Off 1** to cancel. The drawer will turn off when water has drained.

SET UP WI-FI AND REMOTE MODE

Connect your appliance to your home Wi-Fi to get software updates, receive wash notifications, customise settings and control your wash cycles remotely.


Getting started

- Ensure your home v network is turned on and there is no wash cycle in progress.
- You will be given step-by-step guidance on your mobile device.
- It may take up to 10 minutes to connect your appliance.




On your mobile device:

- ① Scan the QR code to download the app from www.fisherpaykel.com/connect.
- ② Register and create an account.
- ③ Add your appliance and set up the Wi-Fi connection.

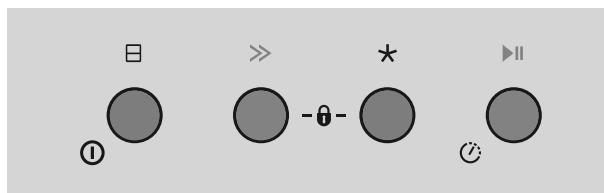


Connecting to Wi-Fi


1. Press and hold **WASH PROGRAM SELECTOR gg** and **START ▶II** together for four seconds.

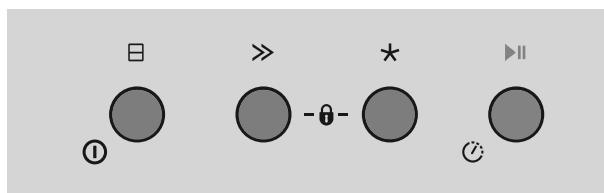

2. Press and hold **START ▶II** to connect to the Wi-Fi network. When the **Wi-Fi icon** (Wi-Fi symbol with a dot) flashes, follow the prompts within the app to complete set-up.

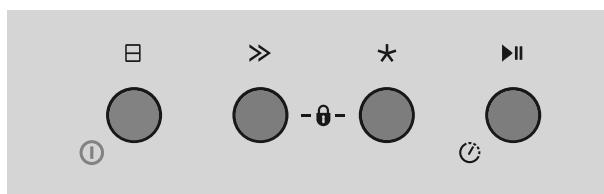

3. Press and hold **On/Off ①** to save and leave the menu after Wi-Fi is connected.

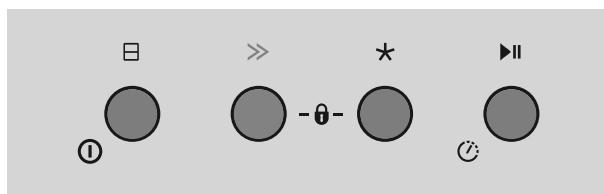

Turning remote mode ON


Open the drawer. Press and hold **WASH PROGRAM SELECTOR gg** until a tone sounds and the **Wi-Fi icon** (Wi-Fi symbol with a dot) flashes. Close the drawer within seven seconds.

ADJUST THE SETTINGS

Go to the app to adjust and customise your settings or follow the steps below to adjust settings directly on your dishwasher. Each setting is displayed using a different combination of indicator lights. Adjust a setting by matching the indicator combinations as shown in 'Settings'.


Before adjusting settings, clear active wash cycles and make sure the controls aren't in sleep mode:

- **If an indicator is flashing** - Press and hold **START ▶II** to cancel an active wash cycle.
- **If all indicators are off** - Press the **WASH PROGRAM SELECTOR** **»** or close and open the drawer to wake up the controls.

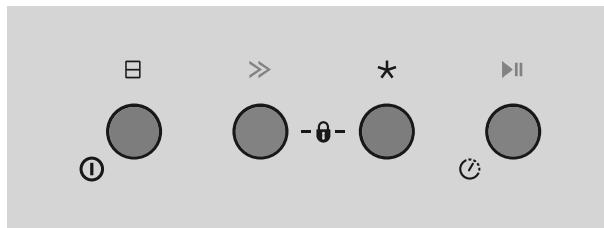


Access settings


1. Press and hold **WASH PROGRAM SELECTOR** **»** and **START ▶II** to access settings.

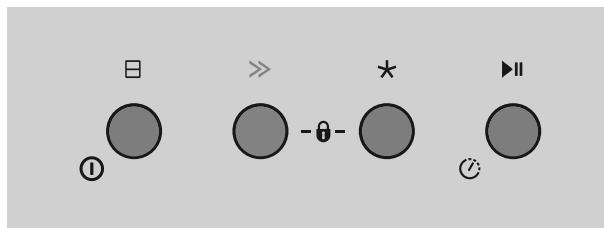

2. Press **WASH PROGRAM SELECTOR** **»** to scroll through the available options.

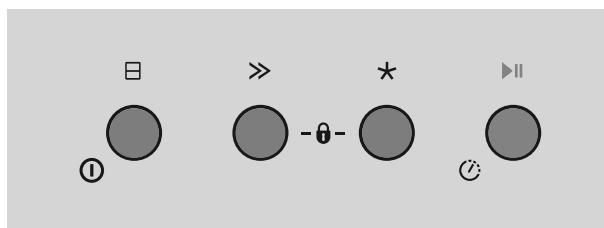

3. Press **START ▶II** to change the setting within an option.

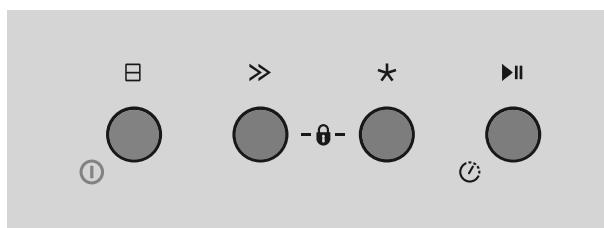

4. Press **On/Off** **①** to save the new setting and leave the settings menu.

SETTINGS

Heavy Medium Eco Fast Delicate Rinse

* Extra Dry



888

Wash



* Quick



888

Rinse



* Sanitize

Dry



Wi-Fi (recommended)

Sanitize, Quiet, Dry+: ON.
Wi-Fi: ON/OFF to set.

Connect your dishdrawer to your home network to operate it via the app and to receive updates.

Heavy Medium Eco Fast Delicate Rinse

* Extra Dry



888

Wash



* Quick



888

Rinse



* Sanitize

Dry

Auto power-on

Dry+: ON.
Auto: ON/OFF to set.

Your DishDrawer™ Dishwasher is set to automatically power on for 30 seconds after a drawer is opened. This can be turned off.

Heavy Medium Eco Fast Delicate Rinse

* Extra Dry



888

Wash



* Quick



888

Rinse



* Sanitize

Dry

Tones

Quiet, Dry+: ON.
Auto: ON/OFF to set.

Adjust tone settings. When set to **OFF**, all tones will be silenced except fault alerts.

Heavy Medium Eco Fast Delicate Rinse

* Extra Dry



888

Wash



* Quick



888

Rinse



* Sanitize

Dry

Rinse aid

Sanitize: ON.
Wash programs: 0–5 to set level.

Control the amount of rinse aid dispensed from 0–5 units. Units correspond to wash program indicator lights. Defaults to 3.

Heavy Medium Eco Fast Delicate Rinse

* Extra Dry



888

Wash



* Quick



888

Rinse



* Sanitize

Dry


Water softener (some models)

Quiet: ON.
Wash programs: 0–5 to set level.

Set water hardness from 0–5. Setting corresponds to wash program indicator lights.

See Care and Maintenance guide for details.


SETTINGS

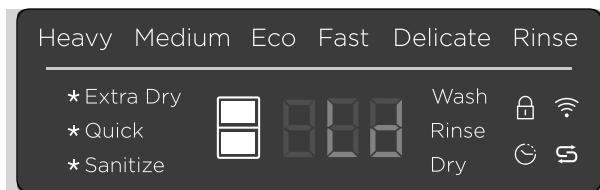

Auto lock

Sanitize, Dry+: ON.
Heavy: ON/OFF to set.


Automatically lock the drawer after 30 seconds to prevent opening during a wash cycle.

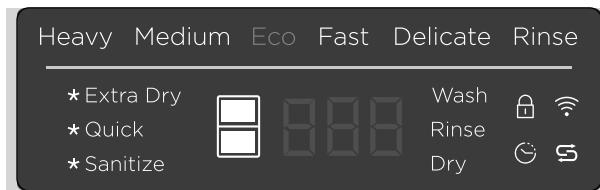

Default (some models)


Sanitize: ON.
Auto: ON/OFF to set.

Automatically default to ECO when in standby mode. This can be turned off.

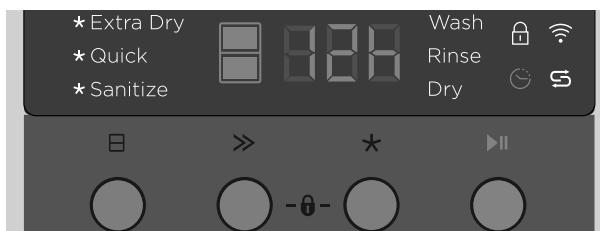

Setting DELAY START


Press and hold START ►II. When pressed, each tone indicates +1 hour (12 max). Press On/Off ① to cancel. DELAYED START INDICATOR ⓘ and DRAWER INDICATOR ☒ will flash when the timer begins.

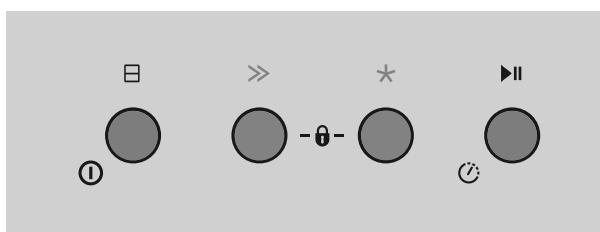

Locking the controls

Lock indicator: ON.

Press and hold WASH CYCLE SELECTOR ➡ and WASH MODIFIER SELECTOR ⋆ together for two seconds. The lock ⓘ will illuminate.

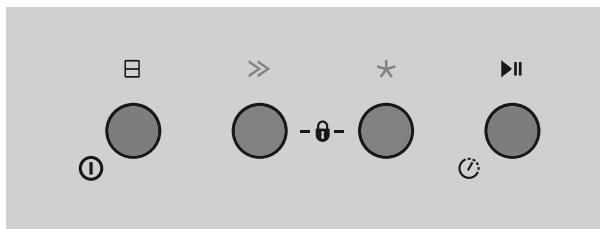

Unlocking the controls

Lock indicator: OFF.

Press and hold WASH CYCLE SELECTOR ➡ and WASH MODIFIER SELECTOR ⋆ together until you hear a tone, and the lock icon ⓘ dims.

MAINTAIN WASH PERFORMANCE

Make these steps a regular part of your cleaning routine to get the best results from your appliance.

Keep the spray arm clear

Check that nothing is obstructing the spray arm. Regularly remove and clean it with hot water and a cloth to unblock the spray holes.

Use correct detergent quantity

You may need to adjust detergent quantity based on local water hardness. Scan the QR code below for recommended detergent quantities.

Use rinse aid

Rinse aid prevents water beading on dishes, glasses and cutlery, so dishes dry faster and do not develop white spots.

Clean the filter

A blocked filter reduces the water pressure required to clean dishes. Remove and clean the filter regularly in hot, soapy water to remove food and grease buildup.

Run regular deep clean cycles

Run a cycle every few months to remove grease and buildup and more often if you use Eco detergents or low-temperature cycles. Use a premium dishwashing cleaner, follow label instructions, and run the **HEAVY** or **HEAVY SANITIZE** cycle.

Descale to remove mineral buildup

Fill the detergent dispenser and secondary compartment with citric acid crystals or descaler. Run the dishwasher on the **HEAVY** cycle followed by a wash program with detergent immediately after.



Care, maintenance and troubleshooting information

Scan the QR code or visit fisherpaykel.com and search for your model code.

DD60SCTX9, DD60SCX9, DD60DCX9, DD60SCTX9 & DD60SCX9

FISHERPAYKEL.COM

© Fisher & Paykel Appliances 2026. All rights reserved.

The models shown in this guide may not be available in all markets
and are subject to change at any time.

The product specifications in this guide apply to the specific products and models
described at the date of issue. Under our policy of continuous product improvement,
these specifications may change at any time.

For current details about model and specification availability in your country,
please go to our website or contact your local Fisher & Paykel dealer.

433406B 02.26