
STEAM OVEN INSTALLATION GUIDE

Components required	3
Accessing your product specifications	4
Unpack product	6
Remove door	7
Connect power	9
Position in cavity	10
Refit door	11
Align to surroundings	12
Secure to cavity	13
Refit shelves	14
Checklist	15

FISHER & PAYKEL

NZ AU UK IE SG

MINIMAL

OS76NMUNG3, OS76NMUNB3, OS76NMUG3, OS76NMUB3

CONTEMPORARY

OS76NCUDX3

PROFESSIONAL

OS76NPUX3

COMPONENTS REQUIRED

..... **TOOLS**

Not supplied

- ☐ Powered driver
- ☐ Cross-head screwdriver

..... **PARTS**



Supplied

- ☐ #8X22 black, wafer head, Phillips, wood screws (2)
- ☐ Cabinetry trim (Part number: 553062)

ACCESSING YOUR PRODUCT SPECIFICATIONS



For full product, cabinetry and service specifications, refer to the Planning Guide. To access the Planning Guide, scan the QR code or visit fisherpaykel.com/specify. Search by appliance type, product name or model code.

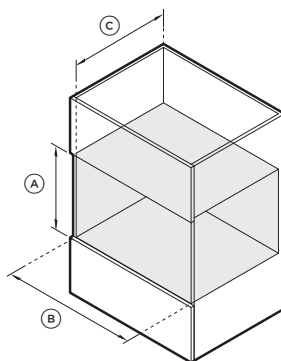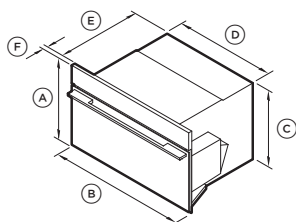

PRODUCT DIMENSIONS

	mm
(A) Overall height	458
(B) Overall width	758
(C) Chassis height	435
(D) Chassis width	720
(E) Chassis depth	545
(F) Control panel thickness	
Minimal and Contemporary models:	20
Professional models:	24

CAVITY DIMENSIONS

	mm
(A) Minimum inside height of cavity	440
(B) Minimum inside width of cavity	724
(C) Minimum inside depth of cavity*	550
Recommended cabinet height	460
Recommended cabinet width	762

*Measured from front of chassis.

PRIOR TO INSTALLATION



fisherpaykel.com/specify

1. Refer to the Planning Guide for cabinetry, cavity, panel and service specifications.

For dark cabinetry, ensure clashing has been considered and installed.



2. Ensure the cabinet meets the minimum cavity specifications required.

The cabinet must be level and square to prevent the need for product adjustments such as shimming.

UNPACK PRODUCT

- Do not lift or move the product using the door handle.
 - Keep all packing materials until the unit has been inspected.
 - Inspect the product to ensure there is no shipping damage. If any damage is detected contact the dealer or retailer you brought the product from to report the damage.
 - Fisher & Paykel is not responsible for shipping damage.
-



1. Cut all straps and remove the carton top cap.



2. Lift the carton sleeve and remove any transit packaging. Set aside any accessories.

Dispose of packaging responsibly.

REMOVE DOOR



1. Open the door and remove all cable ties and packaging holding the oven shelves in place.



2. Grip the shelves at the front, making sure to hold the wire shelf and frame together. Lift upwards and pull out from the oven.




UNLOCKED



LOCKED

3. Locate the hinge locks on either side of the door. Push the locks upwards to release. Slight resistance when turning the locks is expected.

REMOVE DOOR

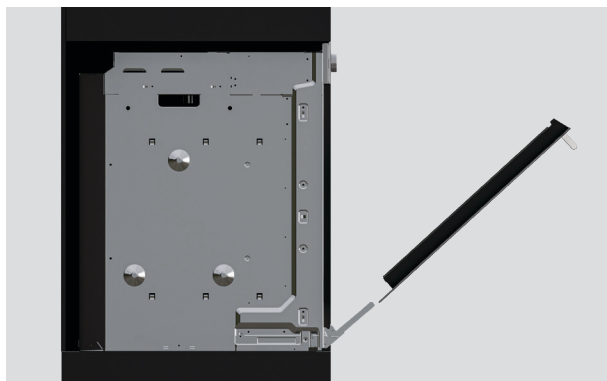


3. Holding the door on both sides, partially close the door and carefully pull the door away from the hinges.

CONNECT POWER




1. Unclip and lift cover to access terminal block.

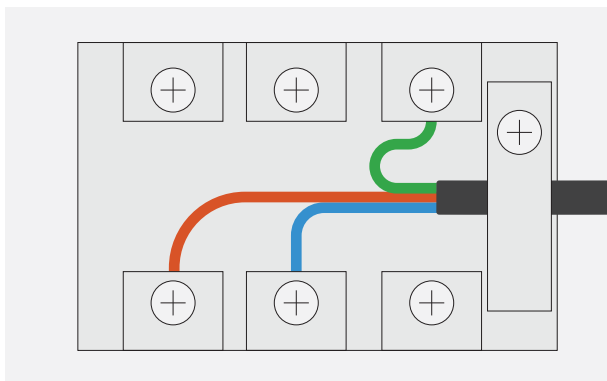

2. Based on your terminal block configuration, connect wires as shown. Connector and ports may not be present on all models.

Ensure oven is correctly Earthed and cable clamp is tightened before closing the cover.

POSITION IN CAVITY

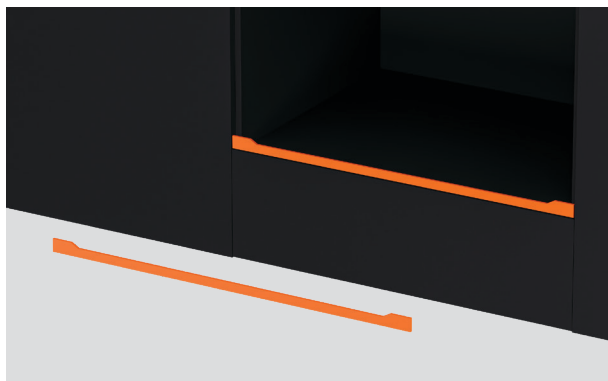


1. For dark cabinetry, the supplied trim can be used to enhance clashing finish. To install, remove the trim adhesive and press to secure to cavity*.




2. Apply protective tape to adjacent cabinetry panels before lifting product into place.

*To purchase cabinetry trim as an optional accessory, visit fisherpaykel.com

REFIT DOOR

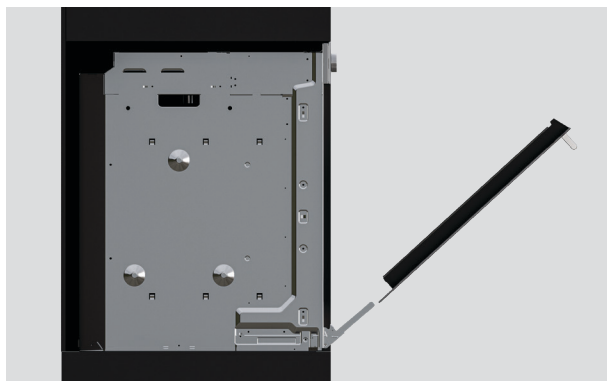

1. Holding the door on both sides, carefully lift door back onto the hinges.

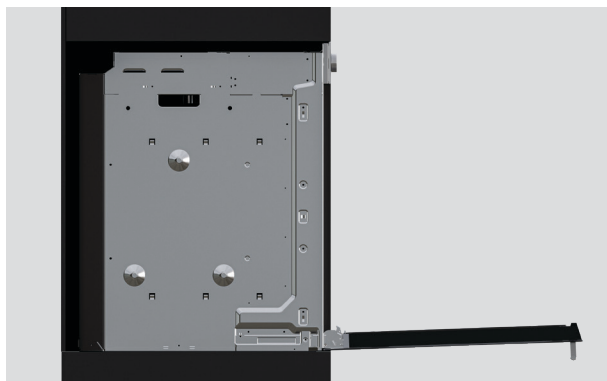

2. Open the door fully and push each locking lever down and lock into place.



UNLOCKED



LOCKED

3. Ensure both hinges are fully locked before shutting the door.

ALIGN TO SURROUNDINGS




1. Align oven with surrounding cabinetry and appliances.



2. Ensure the vertical gaps are even before making any horizontal adjustments.

SECURE TO CAVITY

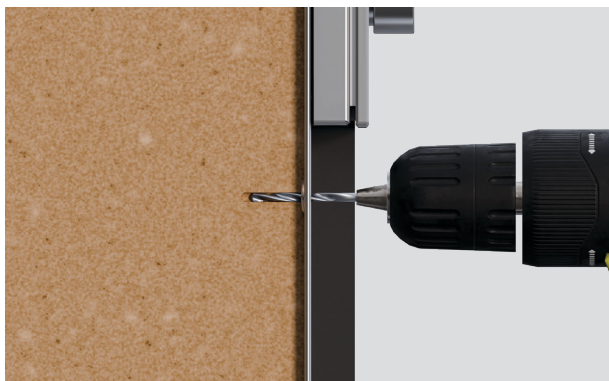

1. Using the product as a guide, pre-drill 2 x 3mm pilot holes.



2. Secure oven to cavity using the 2 x screws provided.

REFIT SHELVES



1. Refit all shelves.

CHECKLIST

Installation checks

- ☐ All clearances are correct.
- ☐ The product is level and securely fitted in the cabinetry.
- ☐ Check the lower trim is undamaged.
- ☐ All internal packaging is removed.
- ☐ The isolating switch can be easily reached.

Test operation

- ☐ Turn product on at the power supply.
- ☐ Follow the on-screen guidance to connect the product to Wi-Fi and set the clock.

Complete and keep for safe reference:

Model _____

Serial no. _____

Purchase date _____

Purchaser _____

Dealer address _____

Installer's name _____

Installer's signature _____

Installation company _____

Installation date _____

