

WASH PROGRAMME DATA

Wash temperatures indicated are approximate. For information on which program to use for your load, refer to your user guide.

DW60FC2X2, DW60UC2X2, DW60UN2X2, DW60UN2B2, DW60U2I2

CYCLE	WASH PROGRAMME							
	AUTO	HEAVY	MEDIUM	LIGHT	ECO*	60 MIN	RINSE	GLASSWARE
Pre wash	n/a	45°C	Yes	n/a	Yes	n/a	n/a	n/a
Main wash	45–68°C	68°C	55°C	45°C	45°C	60°C	n/a	n/a
Post rinse	35°C	Yes	Yes	55°C	Yes	45°C	n/a	n/a
Final rinse	60°C	60°C	60°C	55°C	40°C	55°C	Yes	n/a
Drying phase	Yes	Yes	Yes	Yes	Yes	Yes	n/a	n/a

DW60UNT4X2, DW60UNT4B2, DW60UZT4B2, DW60UT4I2, DW60FC4X2, DW60UC4X2, DW60UN4X2, DW60UN4B2, DW60U4I2

CYCLE	WASH PROGRAMME							
	AUTO	HEAVY	MEDIUM	LIGHT	ECO*	60 MIN	RINSE	GLASSWARE
Pre wash	n/a	45°C	Yes	n/a	Yes	n/a	n/a	n/a
Main wash	45–68°C	68°C	55°C	45°C	45°C	60°C	n/a	45°C
Post rinse	35°C	Yes	Yes	55°C	Yes	45°C	n/a	55°C
Final rinse	60°C	60°C	60°C	55°C	34°C	55°C	Yes	60°C
Drying phase	Yes	Yes	Yes	Yes	Yes	Yes	n/a	Yes

*Reference programme for energy label compliance with AS/NZS 2007 and AS/NZS 6400

Wash times can vary depending on the incoming water temperature, ambient conditions and type of dish load. Wash times are only APPROXIMATE on the electronic display (where applicable) and based on 20°C incoming water.

STANDARDS TEST


The dishwasher is tested to AS/NZS 2007 and AS/NZS 6400 standards for wash and dry performance, energy and water consumption using the parameters detailed below.

Wash programme	Eco The door will auto open during drying phase
Powdered detergent quantities	5 g pre-wash + 8 g main wash
Rinse aid dosage level	5
Maximum number of place settings	15
Height adjustment of upper basket	Ensure the upper basket is set in the lowest position

Recommended loading patterns



Upper basket

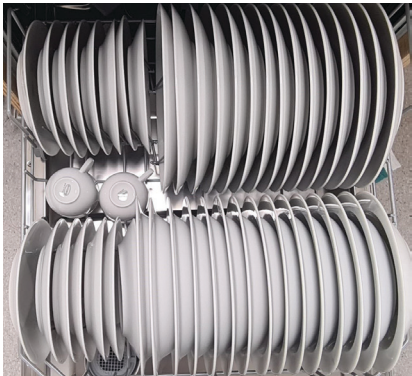

Lower basket



Cutlery tray