
DISHDRAWER™ DISHWASHER

FIRST USE

Get to know your appliance	3
Load dishware	5
Use rinse aid	6
Load detergent	7
Select a suitable cycle	8
Select a suitable modifier	9
Standards testing	9
Set a cycle	10
Set up Wi-Fi and remote mode	11
Adjust the settings	12
Settings	13
Maintain wash performance	15

FISHER & PAYKEL

NZ AU UK IE SG

INTEGRATED DISHDRAWER™ DISHWASHER

 
DD60DI9, DD60DH19, DD60SI9, DD60STI9, DD60SLI9, DD60SHI9,
DD60SHTI9

GET TO KNOW YOUR APPLIANCE




How to get the best results from your dishwasher

- Check that your dishware is dishwasher safe
- Keep the spray arm clear of obstructions
- Load items so water from the spray arm can reach them
- Use correct detergent quantity
- Use rinse aid
- Clean the filter
- Run regular deep clean cycles
- Descale to remove mineral buildup
- Register your product to get streamlined service support.

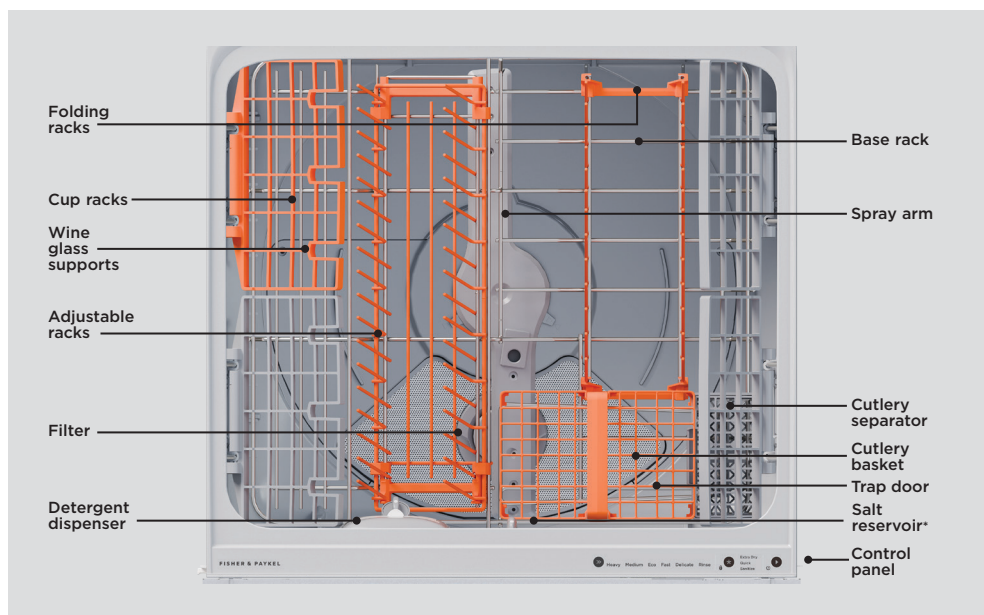

*some models only

 GET TO KNOW YOUR APPLIANCE

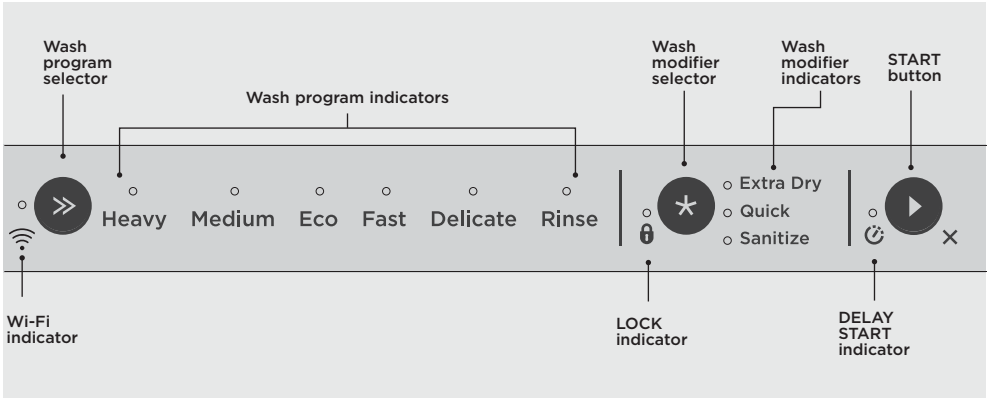


Wash program selector	Press to cycle through and select a wash program.
Wash modifier selector	Press to select a wash modifier.
START button	Press to start or cancel a wash cycle.
Wash program indicators	Indicate which program is selected.
Wash modifier indicators	Indicate which modifier is selected.
DELAY START indicator	Indicates when DELAY START is set.
LOCK indicator	Indicates when drawer is locked.
Wi-Fi indicator	Indicates when product is connected to Wi-Fi.

LOAD DISHWARE

Tips for energy efficiency



 - Load the dishwasher to capacity.
- Remove large food scraps, but do not pre-rinse dishes as this uses more water and energy.
- Select the most appropriate program for each load. Use Eco for normally soiled dishes.

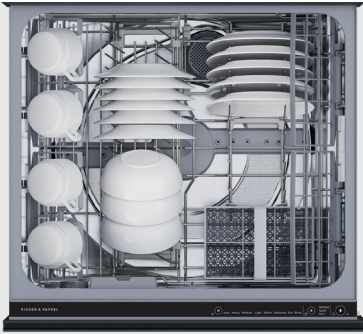

Load items effectively

Space items evenly in the drawer, with cups and containers facing down, so water from the spray arm can reach them and drain away.



Check for obstructions

Check there are no items that will prevent the spray arm from rotating.



Load cutlery correctly

Load sharp knives with handles up. Mix spoons, knives and forks in each section to prevent nesting.

USE RINSE AID



Rinse aid improves dry performance and prevents tarnishing on metal and streaks on glass and dishware. Fill the rinse aid dispenser before adding detergent.



1. Check the rinse aid indicator. Only refill rinse aid if the indicator is bright red.



2. Turn the rinse aid cover and lift it out. Carefully pour rinse aid into the opening, then refit the cover and turn it to secure. Clean spills immediately to prevent excessive foaming.

LOAD DETERGENT



We recommend:

- Premium powdered detergents and tablets to effectively clean dishes, utensils and filters in your dishwasher.



We do not recommend:

- Non-premium powdered detergents and tablets, as these can result in faster grease buildup and reduced wash performance.
- Detergent sheets, as these produce excessive foam.
- Handwashing dish detergents and laundry or other detergents.



If using powdered detergent

Press the latch to open the dispenser.

Add the recommended quantity of detergent, and close the dispenser. See Care and Maintenance guide for details.



If using tablets

Place a tablet directly into the cutlery basket or on the tablet tray.

Ensure tablet is not touching cutlery or dishes.

SELECT A SUITABLE CYCLE



Each cycle is designed for a specific purpose and has different time, energy and water requirements. Choose a cycle that balances load type and efficiency to get the best results.

⌚ TIME | ⚡ ENERGY | 💧 WATER

WASH PROGRAMS

ECO DEFAULT

For normally soiled dishes for optimum water and energy use.



HEAVY EXTRA DRY, QUICK, SANITIZE

Designed for heavily soiled pots, pans and dishes.



 
MEDIUM EXTRA DRY, QUICK, SANITIZE

For dishes that are quite heavily soiled or to remove food that has been left overnight.



FAST EXTRA DRY

For lightly soiled dishes.



DELICATE EXTRA DRY, QUICK

For lightly soiled and heat sensitive crockery and glassware such as wine glasses.



RINSE

Prevents odours and soils from drying on dishes.



WASH MODIFIERS

EXTRA DRY

EXTRA DRY increases the final rinse temperature and the length of the drying phase.

QUICK

QUICK uses additional water and energy for a faster wash time.

SANITIZE

SANITIZE increases rinse temperature to 70°C. This meets the sanitisation conditions required by Section 6, NSF 184.

A successful cycle will end as normal. If the sanitize cycle is interrupted, an alert will sound and the sanitize indicator will flash. Press **START ►** twice to clear alert. Repeat the cycle.

Drawer Dry

Drawer Dry is an essential function that protects your DishDrawer from moisture buildup. The low-power fan automatically starts after each wash cycle to dry the appliance. The fan may operate for up to several hours and will stop if the drawer is opened. In single drawer models, the fan will resume once the drawer is closed.

 
STANDARDS TESTING

Wash program standards tests are based on the **ECO** wash program. Standards testing information and wash data can be viewed online by going to <https://www.fisherpaykel.com> and searching your model code.

New Zealand / Australia / Singapore: 7 place settings per drawer.

United Kingdom / Ireland: 6 place settings per drawer.

SET A CYCLE

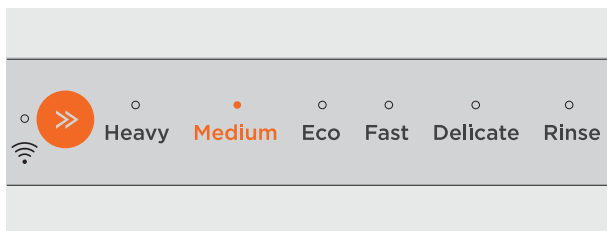

Setting a wash program

1. Press program selector
» to scroll and select a
wash program.

Press **START** ► then close
the drawer.



Setting a wash modifier

Press modifier selector ★ to
select a wash modifier.

Press **START** ► to start the wash,
then close the drawer.



Pausing a wash

Knock twice on closed drawer
to pause the wash. This unlocks
the drawer so you can open it.



Resuming a wash

Press **START** ► to resume
the wash, then close the
drawer.



Cancelling a wash

Press and hold **START** ► to
cancel. The drawer will turn off
when water has drained.

SET UP WI-FI AND REMOTE MODE

Connect your appliance to your home Wi-Fi to get software updates, receive wash notifications, customise settings and control your wash cycles remotely.

Getting started

- Ensure your home Wi-Fi network is turned on and there is no wash cycle in progress.
- You will be given step-by-step guidance on your mobile device.
- It may take up to 10 minutes to connect your appliance.



 
On your mobile device:

- ① Scan the QR code to download the app from www.fisherpaykel.com/connect.
- ② Register and create an account.
- ③ Add your appliance and set up the Wi-Fi connection.



Connecting to Wi-Fi


1. Press and hold program selector » and modifier selector ★ together for four seconds to access settings mode.

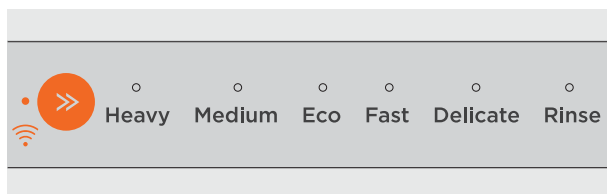

2. Press and hold program selector » until Wi-Fi icon flashes, then follow instructions in the app to complete set-up.



 3. Press **START** ► to exit the menu.

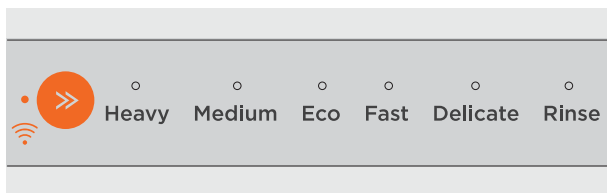

Turning remote mode ON

Press and hold program selector » until Wi-Fi icon flashes. Close the drawer.

 
Turns off when you open the drawer or after 72 hours.

ADJUST THE SETTINGS

Go to the app to adjust and customise your settings or follow the steps below to adjust settings directly on your dishwasher. Each setting is displayed using a different combination of indicator lights. Adjust a setting by matching the indicator combinations as shown in 'Settings'.


Before adjusting settings, clear active wash cycles and make sure the controls aren't in sleep mode:

- **If an indicator is flashing** - Press and hold **START ▶** to cancel an active wash cycle.
- **If all indicators are off** - Press the program selector **»** or close and open the drawer to wake up the controls.

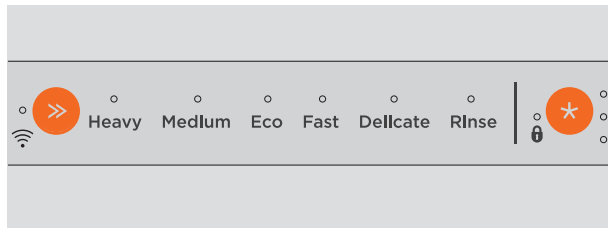


Access settings

 
1. Press and hold program selector **»** and modifier selector **★** together for four seconds to access settings mode.

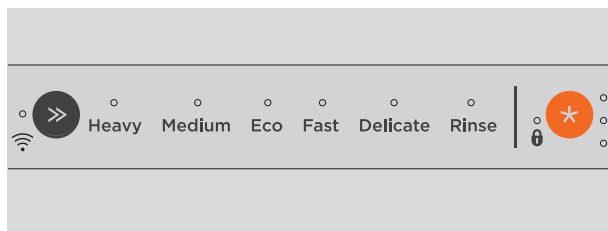

 2. Press modifier selector **★** to scroll through the settings.

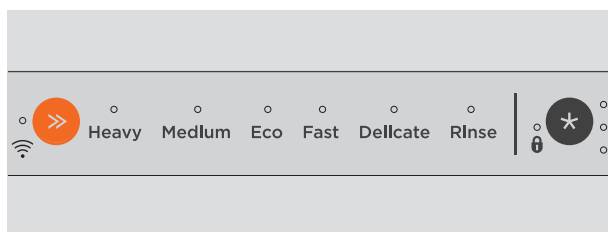

 3. Press program selector **»** to change the options within a setting.

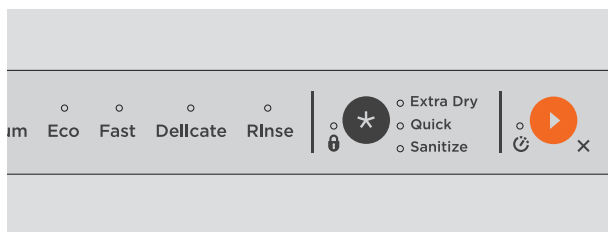

4. Press **START ▶** to save and exit the menu, or press and hold **START ▶** to cancel.

Settings apply to both drawers in double models.

 
SETTINGS



Wi-Fi (recommended)

Extra Dry, Quick, Sanitize: ON.
Wi-Fi: ON/OFF to set.


Connect your dishwasher to your home network to operate it via the app and to receive updates.

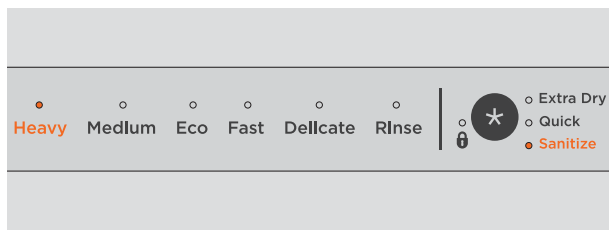

Auto power-on

Sanitize: ON.
Heavy: ON/OFF to set.

 Your DishDrawer™ Dishwasher is set to automatically power on for 30 seconds after a drawer is opened. This can be turned off.

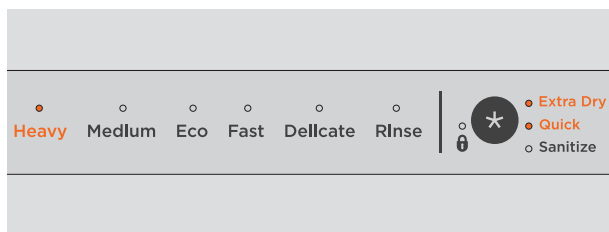

Tones

Extra Dry, Quick: ON.
Heavy: ON/OFF to set.

Adjust tone settings. When set to **OFF**, all tones will be silenced except fault alerts.



Rinse aid

Extra Dry: ON.
Wash programs: 0—5 to set level.

Control the amount of rinse aid dispensed from 0—5 units. Units correspond to wash program indicator lights. Defaults to 4.



Water softener (some models)

Quick: ON.
Wash programs: 0—5 to set level.

Set water hardness from 0—5. Setting corresponds to wash program indicator lights.

See Care and Maintenance guide for details.

SETTINGS

 


Auto lock

Extra Dry, Sanitize: ON.

Heavy: ON/OFF to set.

Automatically lock the drawer after 30 seconds to prevent opening during a wash cycle.

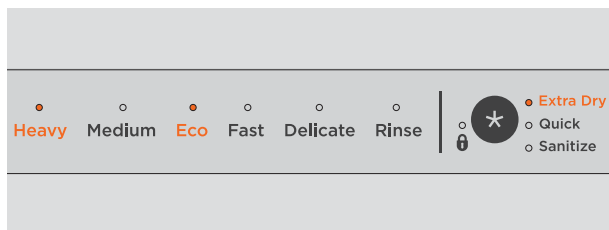

Default (some models)

Extra Dry, Eco: ON.

Heavy: ON/OFF to set.

Automatically default to **ECO** when in standby mode. This can be turned off.



Setting **DELAY START**

Delay start indicator: ON/OFF.

Press and hold **START** ►. Each tone indicates +1 hour (12 max). Timer begins when you release **START** ►.

Press and hold **START** ► to cancel.



Locking the controls

Lock indicator: ON.

Press and hold modifier selector ★ until **LOCK** 🔒 flashes. Press **START** ► and close the drawer to start cycle.



Unlocking the controls

Lock indicator: OFF.

Press and hold modifier selector ★ until **LOCK** 🔒 turns off.

MAINTAIN WASH PERFORMANCE

Make these steps a regular part of your cleaning routine to get the best results from your appliance.

Keep the spray arm clear

Check that nothing is obstructing the spray arm. Regularly remove and clean it with hot water and a cloth to unblock the spray holes.

Use correct detergent quantity

You may need to adjust detergent quantity based on local water hardness. Scan the QR code below for recommended detergent quantities.

Use rinse aid

Rinse aid prevents water beading on dishes, glasses and cutlery, so dishes dry faster and do not develop white spots.

Clean the filter

A blocked filter reduces the water pressure required to clean dishes. Remove and clean the filter regularly in hot, soapy water to remove food and grease buildup.

Run regular deep clean cycles

Run a cycle every few months to remove grease and buildup and more often if you use Eco detergents or low-temperature cycles. Use a premium dishwashing cleaner, follow label instructions, and run the **HEAVY** or **HEAVY SANITIZE** cycle.

Descale to remove mineral buildup

Fill the detergent dispenser and secondary compartment with citric acid crystals or descaler. Run the dishwasher on the **HEAVY** cycle followed by a wash program with detergent immediately after.



Care, maintenance and troubleshooting information

Scan the QR code or visit fisherpaykel.com and search for your model code.

DD60DI9, DD60DH19, DD60SI9, DD60STI9, DD60SLI9, DD60SHI9, DD60SHTI9

